

Assembly Instructions for: R2929



Warning: Choking Hazard
Assembly hardware contains small parts. **Adult assembly required.**



Warning: No Climbing Units are not intended for children to climb on and it is recommended that units **over 32 inches tall** be **attached to a wall to prevent tipping.**



Required Tools:
Medium Size
Phillips Screwdriver

Instructions: Unbox unit and find hardware bag inside of box.

 
 
To hinge the R2929 together follow these instructions:

(Note: Attach the unit together at the hinges before attaching Top hasp lock plate)

- 1 - Set units face to face as shown in illustration at right # 1.
- 2 - Unit has hinges mounted on both sides already simply line up the knuckles of the hinges and slide the hinge pin into the knuckles. If the knuckles do not line up completely loosen the screws a little, and then slide in the pins. You may need to tap the pins in gently to make them seat.
- 3 - Fold units together and close the top doors.

Fold over the hinged part of the hasp and place the lock part underneath and through the hasp. Holding the lock part in place so it does not move, open the hasp and mark where the holes are for the mounting screws.

Screw the lock part of the hasp centered on the marks.

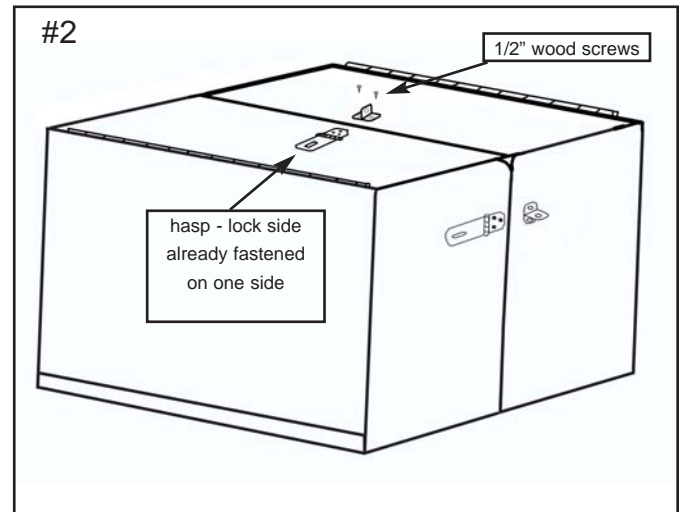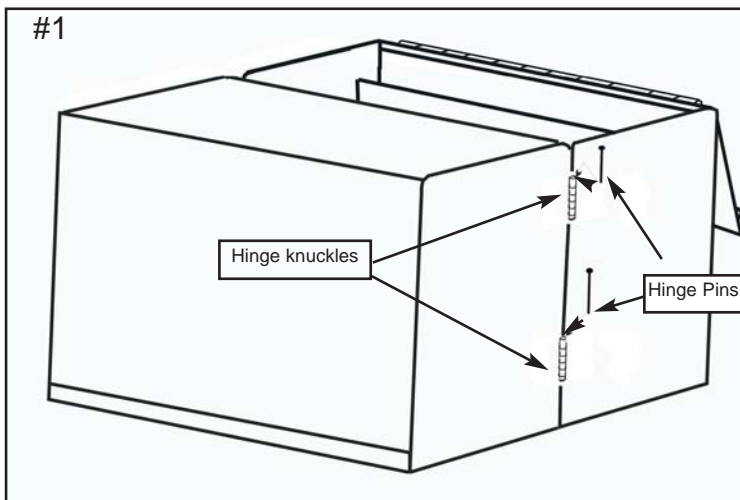

If you have any difficulties assembling this product, please call Childs Play Customer relations at (800) 447-8375 or email us at mail@childsplay1.com
Childs Play 131 Yorktown, Dallas, Tx. 75208
www.childsplay1.com