

Assembly Instructions

for:

CW284-S-HMT



Instructions: Unbox unit and find hardware bag inside of box.

To hinge the CW284-S-HMT together follow these instructions:


(Note: Attach the unit together at the hinges before attaching Top hasp lock plate)

1 - Set units face to face as shown in illustration at right # 1.

(Note: Left side is a CW284-L-T and Right side is a CW284-R-T)

2 - Unit has hinges mounted on both sides already simply line up the knuckles of the hinges and slide the hinge pin into the knuckles. If the knuckles do not line up completely loosen the screws a little, and then slide in the pins. You may need to tap the pins in gently to make them seat.

#1

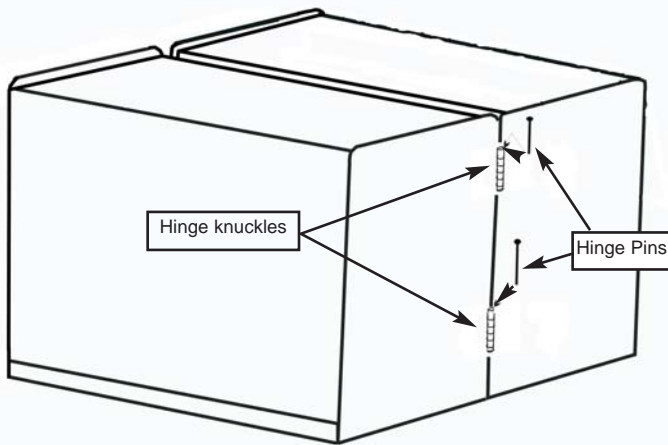

CW284-S-HMT

CW284-L-T
Left Side

CW284-R-ST
Right Side

1ea.
3 section Divider

